

Instructions for Strap Fastener Attachment to RockaRoo®

Follow included instructions or scan here for Assembly Video

For Model Number: 4M-012-01

AHAZARD:

Crawling infants can become entangled in the straps under the seat when the unit is not occupied, posing a strangulation hazard.




To prevent risk of strangulation, Strap Fastener must be installed at all times.



STRAP FASTENER PARTS

Strap Fastener and Hook-and-Loop Strap colors may vary

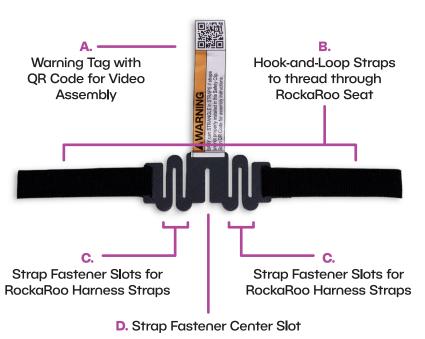

ROCKAROO PARTS



STEP 1

Pull BOTH Harness Straps (F) backward through Seat Slots to remove the Harness from the Seat.





STEP 2

Place the Strap Fastener onto the Harness Straps (F) so that the Center Slot (D) is located about 3 inches from the Central Rail (E)

Make sure Warning Tag (A) is on top.






STEP 3

Take one Harness Strap (F) from Strap Fastener Center Slot (D) and weave through additional 3 Strap Fastener Slots (C1, C2, C3), moving towards the Hook-and-Loop Straps (B). Repeat with second harness strap on other side.

Step 3 must be done on BOTH SIDES of the Strap Fastener.

The Harness Straps (F) must be correctly threaded through the Strap Fastener AT ALL TIMES.

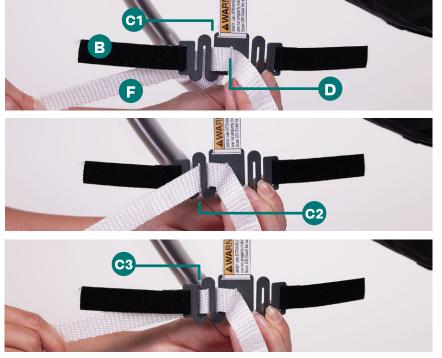



Harness Straps (F) must be tight against the Strap Fastener Slots (C).

STEP 4

Thread the two Hook-and-Loop Straps (B) of the Strap Fastener through the slots on the RockaRoo Seat. Then pull them through to the front of the Seat.





STEP 5

Attach the two Hook-and-Loop Straps (B) to each other. The Hook-and-Loop Straps should be tight enough that the Strap Fastener rests against the back of the Seat.

Strap Fastener must be securely attached to the Seat AT ALL TIMES by the Hook-and-Loop Straps.





STEP 6

Re-thread the RockaRoo Harness Straps (F) through the slots in the RockaRoo Seat and pull them through to the front of the Seat.






STEP 7

Installation Complete. There should be no slack left in the RockaRoo Harness Strap (F) between the back of the RockaRoo Seat and Central Rail (E).

TEST INSTALLATION by lightly pulling on the RockaRoo Harness Straps (F) from behind the seat (inbetween the Seat and Central Rail (E)). If Strap Fastener is installed correctly, the RockaRoo Harness Straps should not pull through to the back of the Seat.



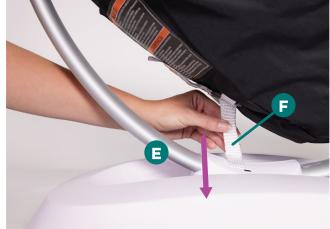



WARNING

- Baby can STRANGLE in STRAPS Secure straps tightly to seat pad through Safety Clip to prevent hanging strap loops. Make sure Safety Clip is
- installed at strap "Y" with straps threaded through both sides.

 TEST INSTALLATION by lightly pulling on straps behind seat pad. Make sure straps do not pull through.

▲ MISE EN GARDE

Le bébé peut S'ÉTRANGLER avec les SANGLES

- Pour empêcher les boucles de sangles de pendre, sécuriser les sangles sur le coussin du siège à l'aide de la bride de sécurité Assurez-vous que la bride de sécurité est installée sur la
- enfilées des deux côtés. ESSAYER L'INSTALLATION en tirant légèrement sur les sangles derrière le coussin du siège
- S'assurer que les sangles ne passent pas à travers. 401

CLEANING

ROCKAROO SEAT FABRIC:

Detach Hook-and-Loop Straps from front of RockaRoo seat. Pull RockaRoo harness straps back through RockaRoo seat slots. Do not remove the Strap Fastener from RockaRoo harness straps to clean seat fabric. Remove seat fabric by unzipping (x2). Follow care instructions.

HARNESS STRAPS AND STRAP FASTENER:

Detach Hook-and-Loop Straps from front of RockaRoo seat. Pull RockaRoo harness straps back through RockaRoo seat slots. Do not remove the Strap Fastener from RockaRoo harness straps. Once disassembled, use a sink or other basin and allow the straps to dangle from the central rail into soapy water. Do NOT immerse the central rail into the water. Once clean, rinse and let dry before reassembling the unit.

QUESTIONS?

Contact support@4moms.com